

RICE Hydro, Inc.
3500 Arrowhead Drive
Carson City, NV 89706
800-245-4777

Operating Instructions for the Pressure Wand Accessory
Model FH-3 Fire Hose Tester

1. Remove $\frac{3}{4}$ " garden hose adapter from air bleed valve ($\frac{1}{2}$ " ballvalve) on manifold. To prevent movement or loosening of the $\frac{1}{2}$ " air bleed ballvalve during adjustment, **HOLD IN PLACE** tightly with wrench.
2. Connect the liquid injector to the air bleed valve. Connect the 50 foot high pressure hose to the quick connect adapter on the liquid injector and wand attachment.
3. Connect the inlet on the FH-3 to a pressure water supply. Close all five $1\frac{1}{2}$ " ballvalves.
4. Turn on the water supply and open the air bleed valve. Flip motor switch to on position. To adjust pressure setting, close the air bleed and loosen locknut on regulator. Turn knob clockwise to increase pressure setting. Open and close air bleed valve to read set pressure and re-adjust as necessary. Tighten locknut. Open the air bleed valve with desired pressure set and begin operation of pressure wand accessory.
5. To adjust spray from dual to single, turn grip handle clockwise for single and counter clockwise to return to dual spray. Place clear injection hose into bucket of soap.
6. With the wand handle grip rotated fully in the clockwise direction just one nozzle is spraying. This will be water only. To activate second nozzle and soap fluid rotate the handle grip counter-clockwise. When adjusting between water only and soap injection fluids, allow a few minutes for existing fluids to clear lines.