

RICE HYDRO, INC.  
MANUFACTURER'S OPERATING INSTRUCTIONS  
FIRE HOSE TESTER MODEL FH-3

**FOR WARRANTY REGISTRATION CALL 800-245-4777**

<u>COMPONENTS</u>	<u>DESCRIPTION</u>
Motor	1 HP 50/60HZ, TEFC, MTO
Pump	110/220V, single phase 3 GPM Triplex Plunger Pump
Gauge	Pressures up to 500 PSI
Inlet	Stainless Steel Liquid-Filled
Outlet	Inlet 2 ½" NST Swivel Coupling
Back Bleed	4 independent Ballvalves with NST couplings
Pressure Regulator	½" ballvalve to bleed air and attach Pressure wand accessory Manual-Operated Pressure Relief valve, adjustable settings with bypass

**HOOKING UP THE PUMP:**

1. Connect inlet to fire hydrant outlet with 1 ½" or larger hose
2. Connect fire hose to be tested to suitable adapters on manifold outlets. Hose should have nozzles on the end to bleed the air from the lines at full flow. Hoses should be lying up hill from the pump if possible.
3. Connect garden hose to back bleed and direct to a drain area keeping test area dry.
4. ASSURE MOTOR IS "OFF". Connect the power cord to a standard wall outlet. Extension cord: when needed, a 12 gauge 3 wire, max 25 ft length, plugged into a 20amp breaker is required.

**OPERATING THE PUMP:**

1. Close all ballvalves, slightly crack open the ½" bleeder ballvalve.
2. Open inlet ballvalve. Open outlet ballvalves one at a time and allow each hose to be filled through manifold. Do not turn pump on at this time.
3. To insure air is safely bled from hoses, bleed each hose, one line at a time with hydrant volume and pressure, utilizing a nozzle or shut off at the end of the hose.
4. When each line is filled, free of air, with nozzle closed, close the ballvalve at the manifold outlet to seal that line. Even if you are not using all four outlets, bleed them with full hydrant flow. All air must be removed.
5. With back bleed open, turn on the pump. This will bleed the air out of the pressure side of the pump - out to the drain area.
6. Close 1 ½" ballvalve at inlet of manifold/unit, directing water flow from hydrant to pressure side of pump. No pressure will build until this ballvalve is closed.
7. Slowly close the ½" back bleed ballvalve at end of 1 ½" manifold. Check the gauge to verify pressure setting of relief valve. The pressure regulator has been preset at factory. **To change this setting you must make this adjustment while the water is flowing freely, under no pressure.** To adjust pressure, first loosen the locknut. Turn the T-handle/knob clockwise to increase and counter-clockwise to decrease the pressure. Place a ballvalve or similar open and close valve at the end of the outlet hose(s), open and close ballvalve to check pressure setting and re-adjust as necessary. It is also recommended that you open and close the ½" back bleed valve to release excess air from piping and ensure accurate pressure readings. Once desired setting is reached, IT IS VERY IMPORTANT THAT YOU RE-TIGHTEN THE LOCK/JAM NUT, do not leave adjustment handle free to move or vibrate out of setting. If unloader valve handle is removed or otherwise becomes disengaged, see attached diagram to rebuild assembly correctly. CAUTION: IT IS VERY COMMON TO REPLACE POPPET/BUTTON BACKWARDS, THE LONGER LEG WITH STEEL BALL FACES AWAY FROM THE SPRING.

8. Open the 1 1/2" ballvalves at the outlets and begin building pressure in all the lines. In the event there is an acceptable leak in the system that must be overcome by leaving the pump running. Crack the 1/2" back bleed valve allowing a small amount of cool fresh water to run in bypass. **Once pressure has been reached close all ballvalves and shut off pump.**
9. If the air has been bled as outlined, the pump will build pressure quickly and safely with only hose stretch to overcome. If a hose ruptures, the only volume of water available is through GPM of pump. **NO SURGE OF VOLUME, NO WILD LINE.**
10. Remember it is very important to bleed the air out of each line, the manifold and the high pressure side of the pump with as much volume at hydrant pressure as possible. This will provide the most safety during testing.
11. It is impossible to insure that air is not caught behind couplings. If air is caught behind a coupling that fails- it could cause an explosion and fragmentary effect. Do not bend over the top of the pump. Treat hoses and couplings under pressure as dangerous.

NOTE: When dealing with existing pressured hoses or to re-pressurize hose, unit's existing manifold/piping pressure must be bled back down to 70 PSI. **DO NOT LOWER PRESSURE ON HOSES OR TEST ENVIROMENT**, just in manifold/piping section of pump. High existing "head pressure" will cause motor to stall, not start at all, or pump to fail. Examples: hoses are pre-filled and have existing pressure of 120 PSI, and you need to build to 150 PSI, the positive displacement pump will struggle with overcoming this existing head pressure. **TO OVERCOME:** with 1 1/2" outlet ballvalves closed holding existing pressure open backbleed 1/2" ballvalve to release pressure in piping/manifold down to 70 PSI or below. Turn motor/unit on and close 1/2" backbleed ballvalve building pressure within piping/manifold to at least 30 PSI above existing test pressure (this will allow the pump to overcome the existing head pressure, and begin to open individually the 1&1/2" ballvalves.

#### MAINTENANCE, TROUBLESHOOTING, AND CAUTIONS:



1. DO NOT RUN PUMP DRY. (EXCEPT FOR 3-5 SECONDS WHEN DRAINING)
2. DRAIN ENTIRE SYSTEM AFTER EACH USE.
3. FLUSH WITH ANTI-FREEZE TO PROTECT FROM FREEZING IN COLD CLIMATES.
4. PLUG IN DIRECTLY TO WALL OUTLET OR NO **SMALLER THAN A 12 GAUGE 3 WIRE 25' EXTENSION CORD.**
5. Periodically check oil level in pump thru sight glass, 30wt non-detergent.

#### POSSIBLE CAUSE

#### SOLUTION

Leaks	Look for leaks in water supply or connections.
Kinked/Collapsed	Supply hose may be kinked or collapsed.
Pump Sucking Air	Small holes in supply hose are hard to find as air is sucked inward. Replace supply hose.
Relief Valve Setting	500 PSI maximum setting.
<b>AIR, AIR, AND MORE AIR</b>	<b>Ensure air is bled from hoses, manifold, piping. The length of time to build pressure and test hoses is directly related to overcoming air buildup.</b>
Not building pressure	Inlet ballvalve has not been closed.
Faulty Gauge	Replace gauge.
Piston Pump - Old Style	Worn seals or cups rebuild pump.
Motor will not Run	Verify plugged directly into wall outlet, or using a minimum 12 gauge 3 wire, maximum 25' extension cord. Push thermal overload button to reset.

# PND 3.0/15-ZA

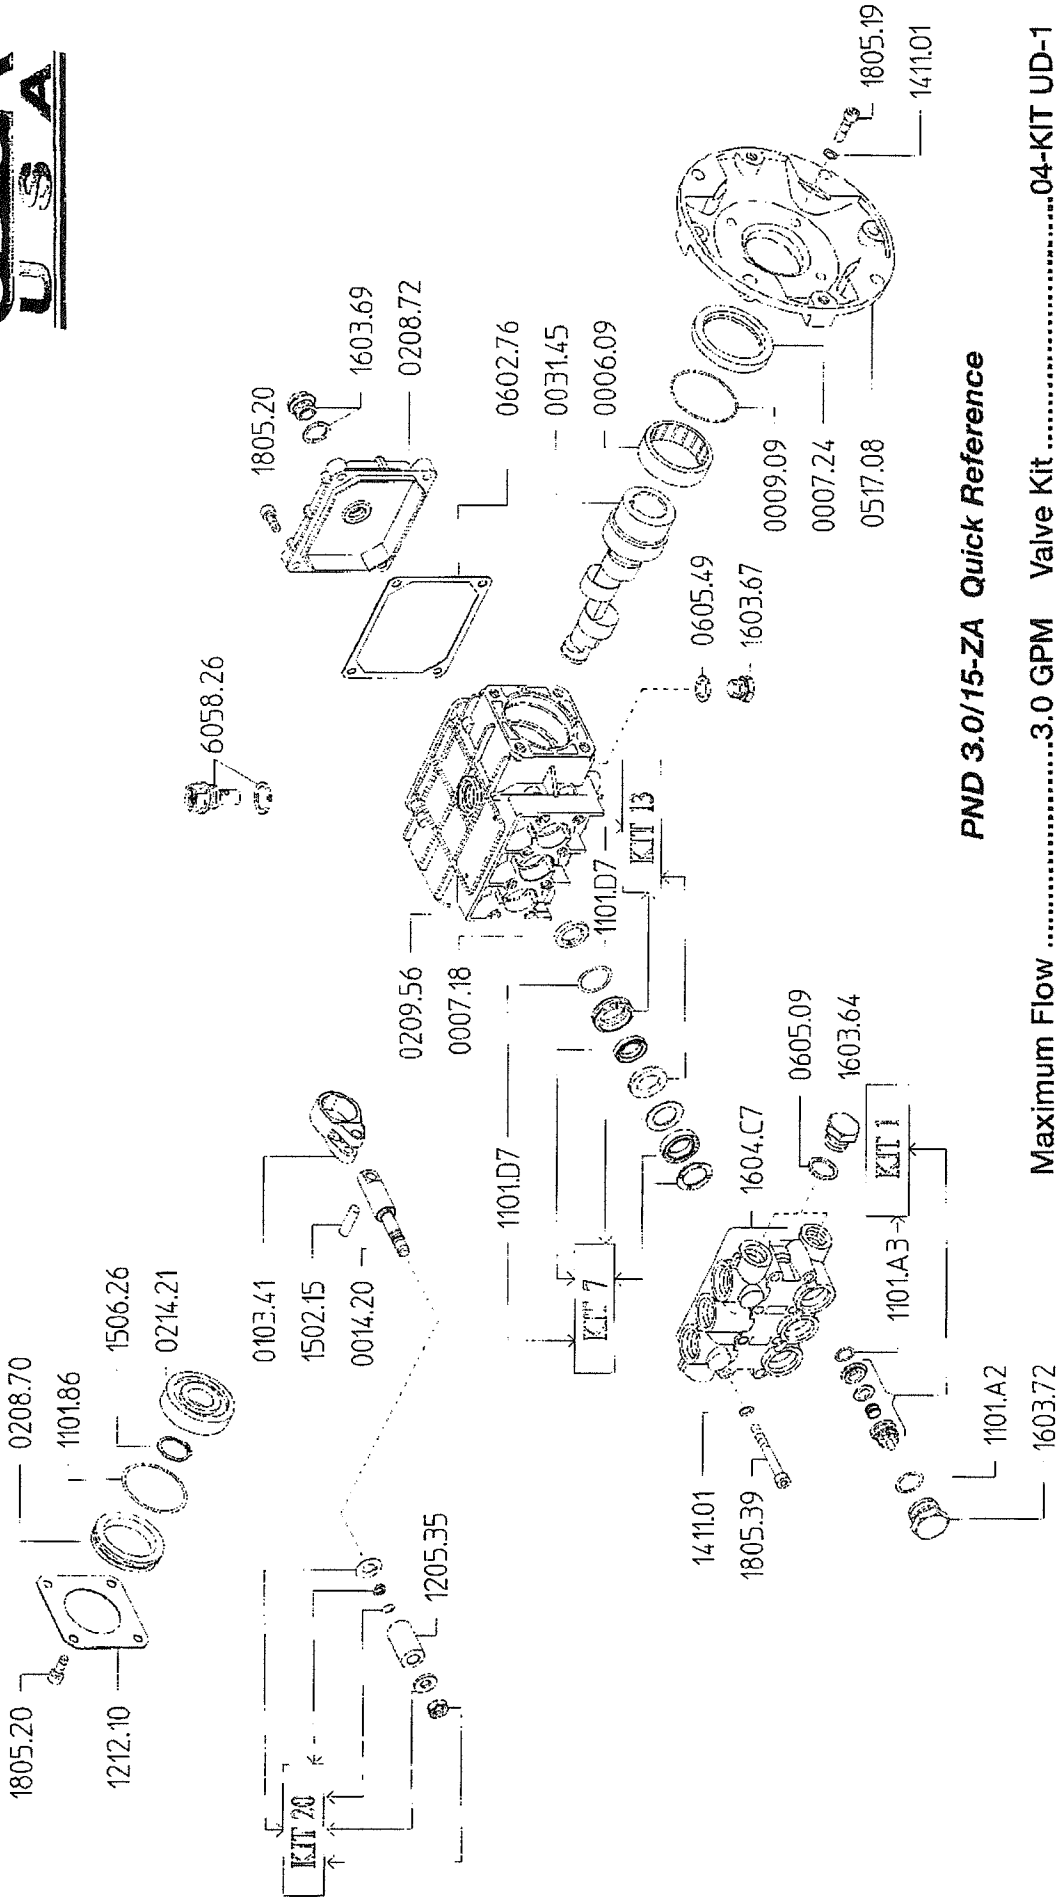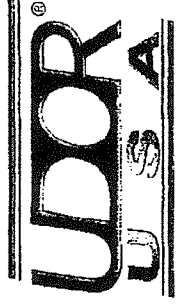

## PND 3.0/15-ZA Quick Reference

Maximum Flow .....	3.0 GPM	Valve Kit .....	04-KIT UD-1
Maximum Pressure .....	1500 PSI	Seal Kit .....	04-KIT UD-7
Rated Pump Speed .....	1750 RPM	Brass Kit .....	04-KIT UD-13
Oil Capacity .....	12 oz. UDOR LUBE or SAE 30W	Plunger Bolt Kit .....	04-KIT UD-20
	Non-Detergent Oil	Plunger Part # .....	1205.35
		Plunger Diameter .....	15 MM

PARTS BREAKDOWN FOR MODEL FH-3 & EL-FHT  
RICE HYDRO, INC.

PART NUMBER..	DESCRIPTION..	QTY REQ'D
UD04-0006.09	BEARING	1
UD04-0007.18	SEAL	3
UD04-0007.24	SEAL	1
UD04-0009.09	RETAINER CLIP	1
UD04-0014.20	PLUNGER ROD P SERIES	3
UD04-0023.22	SUPPORT RING	1
UD04-0031.42	CRANKSHAFT - EL2	1
UD04-0031.45	CRANKSHAFT - EL1	1
UD04-0103.41	ALUM CONNECTING ROD P SERIES	3
UD04-0208.70	BEARING COVER	1
UD04-0208.72	BACK COVER	1
UD04-0209.56	CRANKCASE P SERIES	1
UD04-0214.21	BEARING	1
UD04-0301.42	SLINGER RING	1
UD04-0303.18	PLUNGER NUT	1
UD04-0517.08	ELECTRIC FLANGE P - SERIES	1
UD04-0602.76	GASKET	1
UD02-0605.09	GASKET	1
UD04-0605.33	PLUNGER WASHER	1
UD04-1101.A2	O-RING	6
UD04-1101.A3	VALVE O-RING	6
UD04-1101.A4	O-RING	1
UD04-1101.A6	O-RING	1
UD04-1101.A7	O-RING	1
UD04-1205.35	PLUNGER - 15 MM	3
UD04-1212.10	SIDE PLATE P - PUMP	1
UD04-1411.01	WASHER	12
UD04-1502.15	CONNECTING ROD PIN	3
UD04-1506.26	SNAP RING	1
UD04-1603.64	DISCHARGE PLUG - 3/8	1
UD02-1603.67	DRAIN PLUG	1
UD04-1603.69	SIGHT GLASS	1
UD04-1603.72	VALVE CAP P SERIES	6
UD04-1604.59	MANIFOLD P SERIES 15MM	1
UD04-1805.19	BOLT	4
UD04-1805.20	BOLT QTY 2	8
UD04-1805.39	BOLT	8
UD04-6058.26	OIL VENT CAP P SERIES	1
MOTOR-1HP-CFACE	50/60HZ TEFC MTO	1
SPEC-PND-3.0/15-ZA	TRIPLEX PLUNGER PUMP	1
CHECKVALVE-1/2F	FXF 1200PSI CHECKVALVE	1
BALLVALVE-1/2	1/2" BLEED VALVE	1
BALLVALVE-1&1/2	1&1/2" MANIFOLD BALLVALVE	5
GAUGE-600	0-600 LIQUID GAUGE	1
VALVE-RELIEF-500PSI	BLUE SPRING 50 - 500 PSI	1
HOSE-1/2X2-RH	FH SERIES HOSE	1
SWIVEL-INLET-FH3	1&1/2MPTX2&1/2FST SWV ADPTR	1
ADAPTER-NST-1&1/2	1&1/2 NPT X NST OUTLET ADPTR	4
CASTER-SWIVEL-4	4" SWIVEL CASTER	2
CASTER-RIGID-4	4" RIGID CASTER	2
KITS:	**KITS ARE ALL INCLUSIVE**	
UD04-KIT-UD1	VALVE KIT	
UD04-KIT-UD7	SEAL KIT	
UD04-KIT-UD13	BRASS RETAINER KIT	
UD04-KIT-UD20	PLUNGER / O-RING KIT	

\*\*Prices subject to change without notice\*\*

Revised 09/01/14