

PARTS BREAKDOWN FOR MODEL FH5-B & FH5-H

RICE HYDRO, INC.

PART NUMBER..	DESCRIPTION..	QTY REQ'D
UD04-0007.39	SEAL	6
UD04-0007.40	SEAL	1
UD04-0014.32	PLUNGER ROD	3
UD04-0023.21	SUPPORT RING	3
UD04-0028.17	CRANKSHAFT	1
UD04-0103.39	BRONZE CONNECTING ROD	3
UD04-0115.07	ROD GUIDE M SERIES	6
UD04-0208.69	BACK COVER M SERIES	6
UD04-0209.71	CRANKCASE M & MKC SERIES	1
UD04-0248.02	BEARING	6
UD04-0301.55	SLINGER RING	6
UD04-0303.18	PLUNGER NUT	3
UD04-0501.D8	BEARING CAP	1
UD04-0501.D9	BEARING CAP	1
UD04-0602.77	GASKET	1
UD02-0605.09	O-RING	1
UD04-0605.40	WASHER	1
UD04-0605.49	WASHER	1
UD04-0801.17	KEY	1
UD04-1101.A2	O-RING	6
UD04-1101.A3	O-RING	1
UD04-1101.F6	O-RING	2
UD04-1101.60	O-RING	1
UD04-1101.82	O-RING	1
UD04-1205.31	PLUNGER 20 MM	3
UD04-1403.32	PLUNGER WASHER	3
UD04-1411.02	WASHER	8
UD04-1502.13	CONNECTING ROD PIN	3
UD04-1534.01	SHIM .003	1
UD04-1534.02	SHIM .010	1
UD04-1603.60	VALVE CAP	6
UD04-1603.62	INLET PLUG 3/4	1
UD04-1603.64	DISCHARGE PLUG	1
UD02-1603.67	DRAIN PLUG	1
UD04-1603.69	SIGHT GLASS	1
UD04-1604.60	MANIFOLD	1
UD04-1804.02	BOLT	8
UD04-1804.26	BOLT	4
UD02-1804.57	BOLT	8
UD04-6058.59	DIP STICK	1

GEAR REDUCTION PARTS

UD04-0004.32	3/4" GEAR	1
UD04-0007.33	SEAL	1
UD04-0213.27	PUMP GEAR M & G SERIES	1
UD04-0214.14	BEARING	1
UD04-0228.31	GEAR BOX HOUSING	1
UD04-0516.04	FLANGE M & G SERIES	1
UD04-0602.42	GASKET	1
UD04-0602.59	GASKET	1
UD04-0605.43	GASKET	1
UD04-0614.07	SET SCREW	1
UD04-1411.02	WASHER	2
UD04-1412.04	WASHER	7
UD04-1506.20	SNAP RING	1
UD04-1506.21	SNAP RING	1
UD04-1603.02	DRAIN PLUG	1
UD04-1603.06	OIL SIGHT GLASS	1
UD04-1805.03	BOLT	7
UD04-1805.23	BOLT	2
UD04-6058.26	OIL VENT CAP P SERIES	1

