



INSTALLATION INSTRUCTIONS RI-8 (WHEEL & HANDLE KIT) & 3B-PRESSURED (TANK)

FOR WARRANTY REGISTRATION CALL: 1-800-245-4777 RICEHYDRO.COM

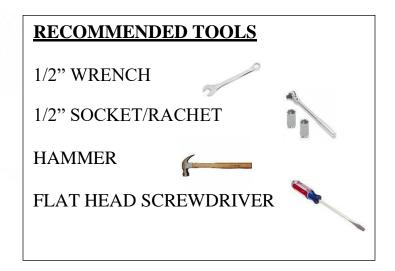

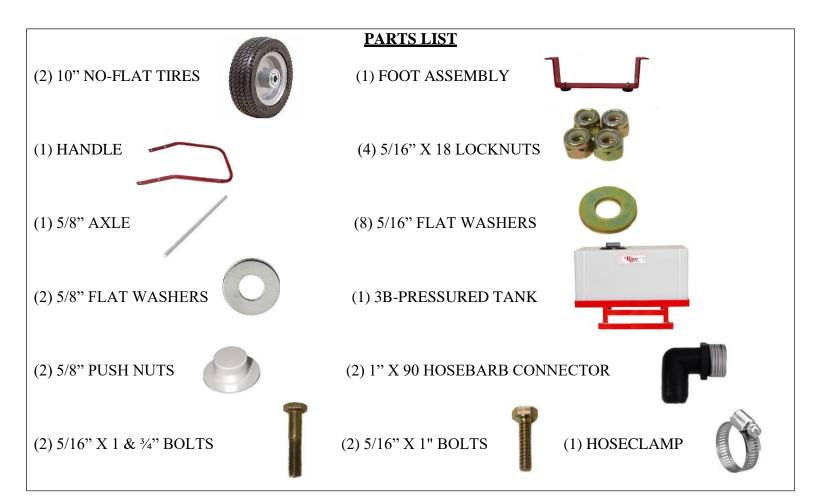



ASSEMBLY INSTRUCTIONS

Step 1. REMOVE 5/16" X 1 & ³/₄" BOLTS, WASHERS, & LOCKNUTS

As shown below, remove from each side 5/16" X 1 & ³/₄ " BOLTS, WASHERS, & LOCKNUTS and save for STEP 4. Use Wrench/Rachet to loosen bolts.



UNDERNEATH ENGINE, REMOVE BOLTS, WASHERS & LOCKNUTS FROM BOTH SIDES, SAVE TO USE FOR STEP 4

Step 3. INSTALLING (1) FOOTREST

Place FOOTREST under base using existing holes as shown below. Insert BOLT, 2 WASHERS, & 1 LOCKNUT in each of the existing holes. Use Wrench/Rachet to tighten.




Step 2. INSTALLING (1) 5/8" AXLE & (2) 10" NO- FLAT TIRES

Underneath the engine side, slide 5/8" AXLE through the existing hole where created in STEP 1, at the bottom of the base. Next, slide on 5/8" WASHER, slide 10" TIRE. Secure TIRE by hammering the PUSH NUT as shown below. Repeat for other side.



Step 4. INSTALLING (1) 3B PRESSURED TANK & (1) HANDLE TO PUMP FRAME HOOKUP

First, align pre-drilled TANK frame holes to PUMP frame predrilled holes. Next, place HANDLE on the inside of the pump frame using existing holes as shown below. From STEP 1, use BOLTS, WASHERS, & LOCKNUTS with the rest from the package. Insert a BOLT, 2 WASHERS, & 1 LOCKNUT in each of the 4 existing holes to secure HANDLE & TANK. Use Wrench/Rachet to tighten.

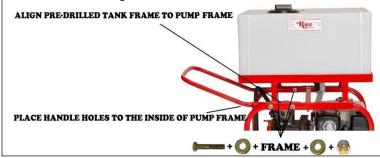

Step 5. INSTALLING TANK OUTLET TO PUMP INLET HOOKUP

First, remove HOSECLAMP from 1" X 90-degree HOSEBARB CONNECTOR. Second, connect the 1" X 90-degree HOSEBARB CONNECTOR into the inlet piping of pump. Third, put HOSECLAMP over PUMP HOSE & slide into HOSEBARB CONNECTOR. Use HOSECLAMP to secure PUMP HOSE & HOSEBARB.

