







RICE HYDRO, INC.
MANUFACTURER'S HOW TO ASSEMBLE INSTRUCTIONS:
DIRTDAWG CUB STAND

FOR WARRANTY REGISTRATION CALL: 1-800-245-477




ASSEMBLY INSTRUCTIONS

<p>(1) X 1 BOTTOM FRAME</p> 	<p>(2) X 2 BOTTOM POLES</p> 
<p>(3) X 2 CONNECTING POLES</p> 	<p>(4) X 1 TOP FRAME</p> 
<p>(5) & (6) X 4 NUTS & BOLTS</p> 	<p>TOOLS RECOMMENDED: 7/16 WRENCH & RUBBER Mallet</p> 


Step 1.

Insert (1) Bottom Frame with (2) Bottom Poles.
 Make sure screw holes align at the bottom.
 Use Rubber Mallet to make sure frame is in place.

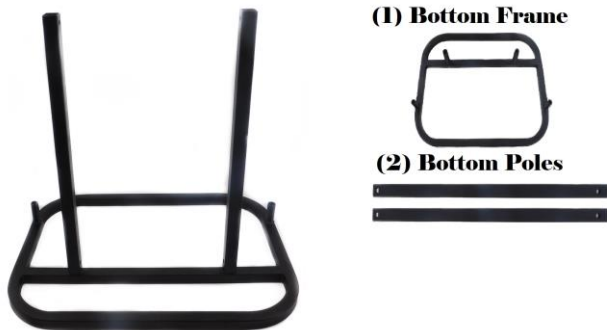


Step 2.

Insert (3) Connecting Poles with (2) Bottom Poles.
 Make sure screw holes align at the bottom & middle.
 Use Rubber Mallet to make sure frame is in place.

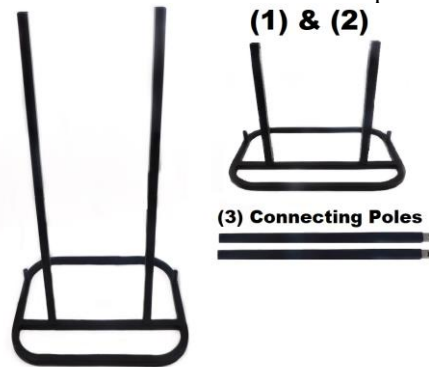

Step 3.

Insert (4) Top Frame with (3) Connecting Poles.
 Use Rubber Mallet to make sure frame is in place.

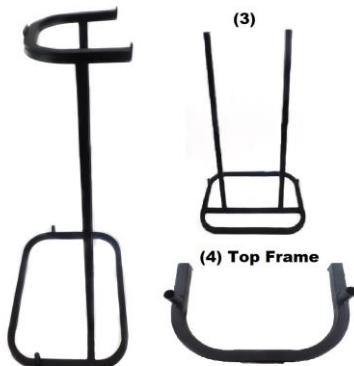

Step 4.

Insert 2 (5) & (6) Nuts & Bolts at the Bottom Frame & 2 (5) & (6) Nuts & Bolts on the Top Frame.
 Use 7/16 Wrench to tighten screws

