



# MODEL DP3 INSTALLATION INSTRUCTIONS RI8 (WHEEL & HANDLE) KIT & 3B-PRESSURED TANK

**FOR WARRANTY REGISTRATION CALL: 1-800-245-4777  
RICEHYDRO.COM**



## RECOMMENDED TOOLS

1/2" WRENCH



1/2" SOCKET/RACHET



HAMMER



FLAT HEAD SCREWDRIVER



(2) 10" NO-FLAT TIRES



(1) HANDLE



(1) 5/8" AXLE



(2) 5/8" FLAT WASHERS



(2) 5/8" PUSH NUTS



(2) 5/16" X 1 & 3/4" BOLTS



## PARTS LIST

(1) FOOT ASSEMBLY



(4) 5/16" X 18 LOCKNUTS



(8) 5/16" FLAT WASHERS



(1) 3B-PRESSURED TANK



(1) 1" X 90 HOSEBARB CONNECTOR



(2) 5/16" X 1" BOLTS



(1) HOSECLAMP



# ASSEMBLY INSTRUCTIONS

## Step 1. REMOVE 5/16" X 1 & 3/4" BOLTS, WASHERS, & LOCKNUTS

As shown below, remove from each side 5/16" X 1 & 3/4 " BOLTS, WASHERS, & LOCKNUTS and save for STEP 4. Use Wrench/Ratchet to loosen bolts.



UNDERNEATH ENGINE, REMOVE BOLTS, WASHERS & LOCKNUTS FROM BOTH SIDES, SAVE TO USE FOR STEP 4

## Step 2. INSTALLING (1) 5/8" AXLE & (2) 10" NO-FLAT TIRES

Underneath the engine side, slide 5/8" AXLE through the existing hole where created in STEP 1, at the bottom of the base. Next, slide on 5/8" WASHER, slide 10" TIRE. Secure TIRE by hammering the PUSH NUT as shown below. Repeat for other side.



## Step 3. INSTALLING (1) FOOTREST

Place FOOTREST under base using existing holes as shown below. Insert BOLT, 2 WASHERS, & 1 LOCKNUT in each of the existing holes. Use Wrench/Ratchet to tighten.




## Step 4. INSTALLING (1) 3B PRESSURED TANK & (1) HANDLE TO PUMP FRAME HOOKUP

First, align pre-drilled TANK frame holes to PUMP frame pre-drilled holes. Next, place HANDLE on the inside of the pump frame using existing holes as shown below. From STEP 1, use BOLTS, WASHERS, & LOCKNUTS with the rest from the package. Insert a BOLT, 2 WASHERS, & 1 LOCKNUT in each of the 4 existing holes to secure HANDLE & TANK. Use Wrench/Ratchet to tighten.

ALIGN PRE-DRILLED TANK FRAME TO PUMP FRAME

PLACE HANDLE HOLES TO THE INSIDE OF PUMP FRAME

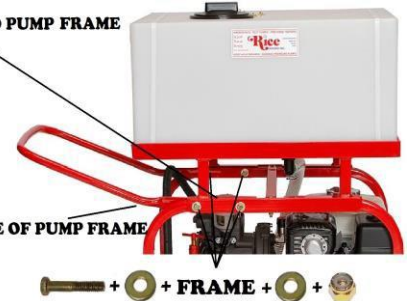

## Step 5. INSTALLING TANK OUTLET TO PUMP INLET HOOKUP

First, remove HOSECLAMP from 1" X 90-degree HOSEBARB CONNECTOR. Second, connect the 1" X 90-degree HOSEBARB CONNECTOR into the inlet piping of pump. Third, put HOSECLAMP over PUMP HOSE & slide into HOSEBARB CONNECTOR. Use HOSECLAMP to secure PUMP HOSE & HOSEBARB.

